



One in two communication line

One in two communication line

PW58330  
Control

Dial Description

	SW1-1	SW1-2	SW1-3	SW1-4
Main	0	0	0	0
Slave 1	0	0	0	1
Slave 2	0	0	1	0
Slave 3	0	0	1	1
Slave 4	1	0	0	0
Slave 5	1	0	1	1
Slave 6	1	1	1	0
Slave 7	1	1	1	1

Cascade control with max 8 units.

The slave address is as shown in the figure:

0=on

1=off

Sw-1 This is reserved and does not need to be changed.

Connection steps: as shown in the figure

